


BRACKETING METHOD

Please, refer to the following indications in order to make a proper bracketing system for your F.Line.PRO network. We recommend the use of F.Line.PRO wall fasteners (FPST) and the related spacers (FPDST) in order to avoid any possible trouble and in order to keep the system safe.


ØID	DISTANCE BETWEEN WALL FASTENERS DEPENDING FROM THE MAXIMUM TEMPERATURE DIFFERENCE		
	< 20°C	30°C	40°C
mm			
20	2,5	2	1,5
25	3	2,5	2
40	4	3,5	3

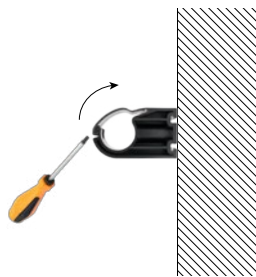

The F-Line.PRO wall fastener can be used both in horizontal or vertical position. Place the FPST at the desired height and open the hook with a screwdriver.



All wall fasteners can be installed using an M8 hexagonal nut to be inserted inside the FPST (by using a threaded bar). It's also possible to use self-tapping screws with a screw-anchor in case of installation on a wall or concrete.

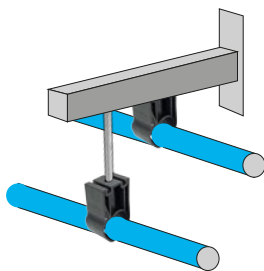

You can secure the wall fastener to any type of clamping system and then insert the tube into the wall fastener and set the hook.



Fasteners can be installed with spacers (FPDST) in order to compensate the distance from the wall.

